

# STPOP

## Stove Top Popcorn Popper Assembly & Operating Instructions



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

HAVE QUESTIONS OR PROBLEMS? DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT BUFFALO TOOLS.

If you experience a problem or need parts for this product, visit our website <http://www.buffalotools.com> or call our customer help line at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY - NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

## ASSEMBLY

### **WARNING**

**Before and after use, wash all parts with warm soapy water.** Use care when handling the product and when cleaning the product to prevent injury.

### **WARNING**

**Cooking with oil on a hot stove can be dangerous.** Do not leave stove or Popcorn Popper unattended. Do not allow children to use Popcorn Popper without adult supervision.

Before use, clean with warm soapy water. Dry the Popcorn Popper. Season the Popcorn Popper by spreading 1 tablespoon vegetable oil inside the pan. Tilt the pan to coat the bottom and sides with the vegetable oil, then heat on stovetop over low heat until oil is hot. Remove from stovetop and let the Popcorn Popper cool. When it is cool to the touch, wipe out the Popcorn Popper with a dry paper towel.

## OPERATION

### **WARNING**

**Turning the hand crank over an open gas-stove flame or electric burner can be dangerous.** Use caution when holding the Popcorn Popper over the stove top and turning the hand crank.

Place Popcorn Popper with ½ cup popcorn and 1-3 tablespoons vegetable oil on gas stove and turn on the burner. Medium heat is best.

For electric stoves, heat only to medium-high.

Stir the Popcorn Popper Crank slowly, adjusting the temperature as needed so that popping is complete in about 3 minutes. Stir the Crank until there is only an occasional pop, or until the handle becomes hard to turn. Do not force the handle.

Remove from heat immediately, and transfer to a serving bowl. Add butter and salt to taste.

Never place empty Popcorn Popper on heated stovetop.

Never leave Popcorn Popper unattended while popping.