

ITEM # SUPA35 Galvanized Steel Kayak Anchor Assembly

Attaching a kayak anchor is essential when you want to keep your kayak stationary in a specific location, especially in windy conditions or while fishing. Here's a step-by-step guide on how to attach a kayak anchor:

Prepare the Anchor Line:

Uncoil your anchor line and ensure it's free of knots and tangles.

If you have a carabiner or anchor clip, attach it to one end of the anchor line. This will make it easier to secure the line to your kayak's anchor trolley system or other attachment points.

Attach the Anchor:

Clip the carabiner or anchor clip to the anchor if you haven't already.

Secure the opposite end of the anchor line to your kayak. There are several methods for attachment:

Anchor Trolley System: If your kayak has an anchor trolley system, use it. Attach the carabiner or anchor clip to the trolley ring or D-ring, and then adjust the trolley so the anchor line runs parallel to your kayak.

Bow or Stern Handle: If you don't have a trolley system, you can secure the line to a secure handle on the bow or stern of your kayak. Make sure it's securely fastened.

Deploy the Anchor:

Carefully lower the anchor into the water, allowing the line to pay out gradually. You can release the line by holding the end without the carabiner or clip.

Allow enough line to reach the bottom, and then let out a bit more to ensure the anchor sets securely.

Test the Anchor:

Gently tug on the anchor line to ensure it's holding and your kayak remains stationary.

If the anchor doesn't hold, you may need to let out more line or try a different location.

Secure the Anchor Line:

Once the anchor is securely holding your kayak, you can secure any excess anchor line by coiling it neatly and securing it to the kayak with a bungee cord or other tie-down method.

Retrieve the Anchor:

When you're ready to leave or move to a different location, simply pull on the anchor line to retrieve the anchor.