

Position Clamp Around Tire Align Holes & Insert Key

Press To Lock Cylinder

Cover Lock With Dust Cap









