


IOCM24

INDOOR / OUTDOOR 24" CONVEX MIRROR

WALL OR POST ASSEMBLY INSTRUCTIONS

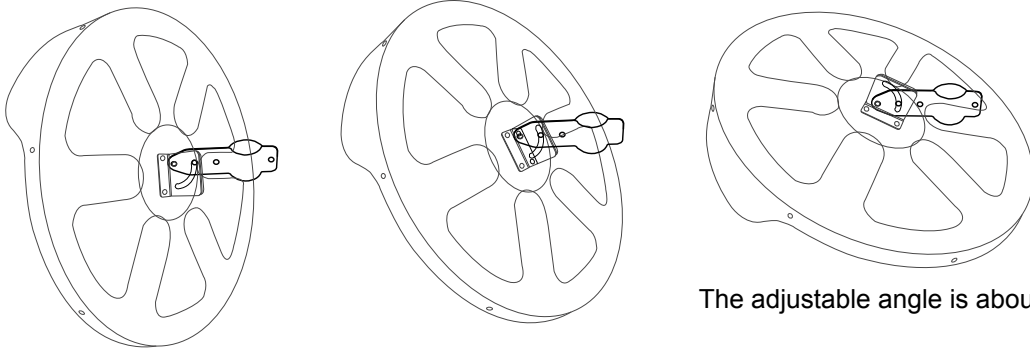

The adjustable angle is about 60°

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.










This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT USE THIS PRODUCT!


DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.

If you experience a problem, have questions or need parts for this product, visit our website <http://www.buffalotools.com> or call Customer Service at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time.** A copy of the sales receipt is required.


KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE

Part #	Item	Description	Qty	Part #	Item	Description	Qty
1		Convex mirror	1 pcs	5		Right L part	1 pcs
2		Clasp	2 pcs	6		Screw M8*20	4 pcs
3		Screw M6*16	4 pcs	7		Nut M8	4 pcs
4		Left L part	1 pcs	8		Wall fitting for Wall Mount	1 pcs
				9		Expansion screw for Wall Mount	3 pcs


WALL ASSEMBLY

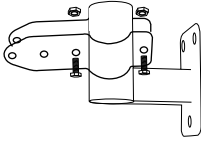


1. Use 2 pieces M8*20 screws through the clasp, then use 2 pieces M8 nuts on the screws. Do not tighten until assembly is complete.

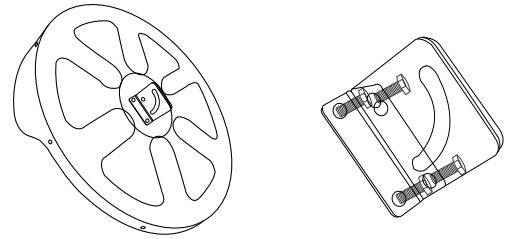

2. Adjust the left L part and right L part on the back of convex mirror. Put 4 pieces M6*16 screws on the L parts and convex mirror.

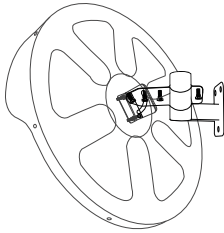


3. Adjust the clasp, then use 2 pieces M8*20 screw to connect clasp and L part. Use 2 pieces M8 nut on the screw. Tighten all nuts.

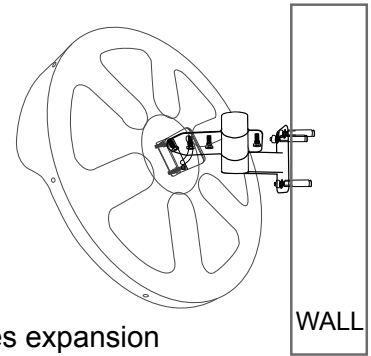


4. Use 3 pieces expansion screws to hang on wall.

POST ASSEMBLY


1. Use a 2 inch diameter post.

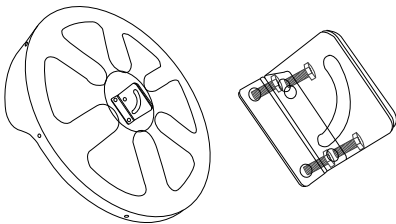

4. Adjust the left L part and right L part on the back of convex mirror, then add 4 pieces M6*16 screws on the L parts and convex mirror.



2. Combine 2 pieces of clasps on the post. Use 2 pieces M8*20 screws through the clasps, then use 2 pieces M8 nuts on the screws. Do not tighten until assembly is complete.

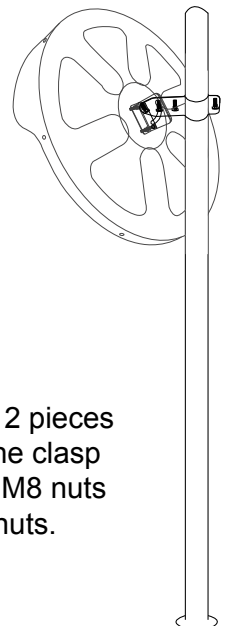

5. Adjust the clasp, then use 2 pieces M8*20 screw to connect the clasp and L parts. Use 2 pieces M8 nuts on the screw. Tighten all nuts.