


D G E

TWO BOLTS "

3 1/8"

BARCODE

8 SCREWS "I"

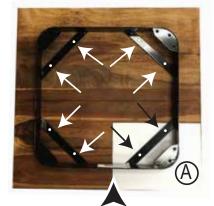

BARCODE

DRILLING INSTRUCTIONS

- 1) Place template in Corner (A) of table
- 2) Line up frame with template
- 3) Use a pencil to mark all holes
- 4) Remove template and drill holes




CORNER




STICKER

EDGE ▼

HARDWARE Identify and locate all hardware components listed below.

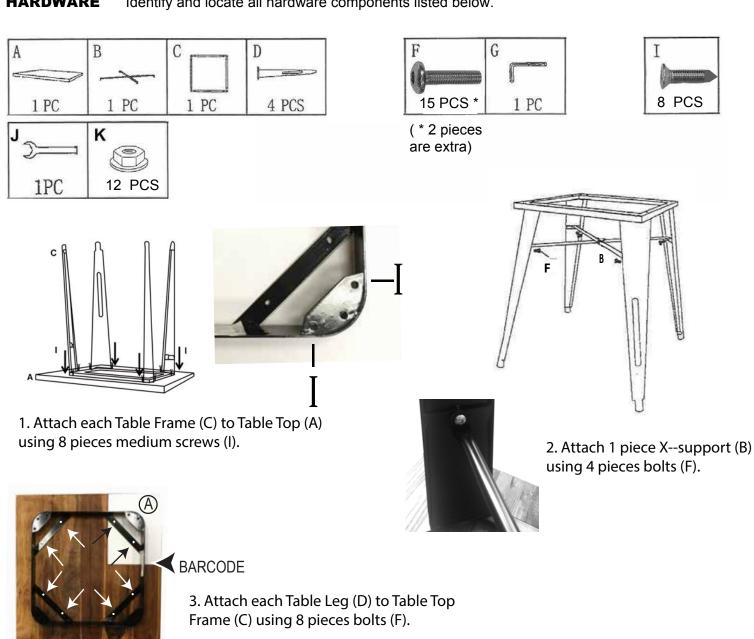

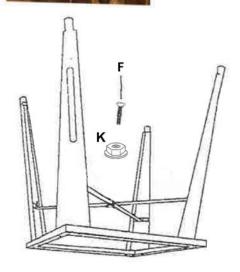

4. Attach X--support (B) using 1 piece screw (F) and nut (K).



5. When all pieces are attached, tighten each screw securely.