


ITEM # AWOBB63 / AWOBW63

ASSEMBLY INSTRUCTIONS

INDOOR/OUTDOOR 63" BENCH

MAX WEIGHT CAPACITY 500 LB

ACACIA WOOD TOP W/METAL POWDER COAT BASE

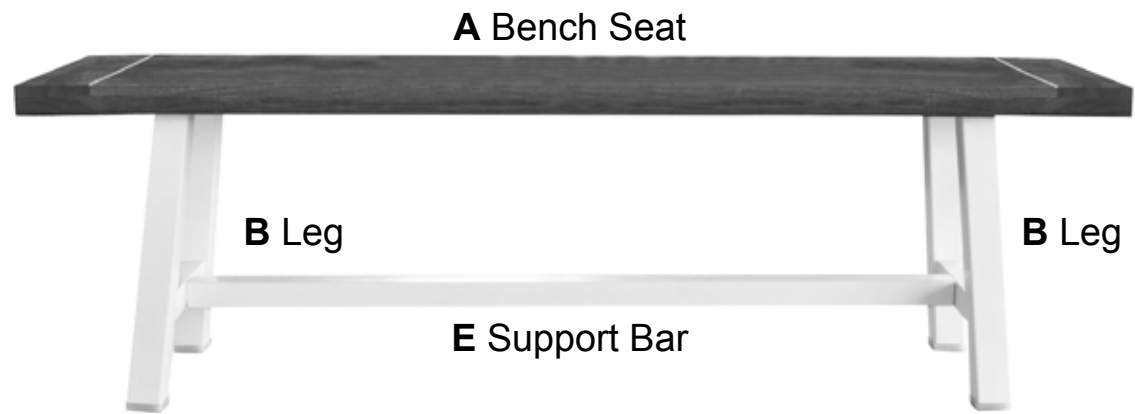


PARTS LIST		
A		1
B		2
C	 BOLTS	6
D	 HEX WRENCH	1
E		1

1. Position the (A) Bench Seat upside down on smooth surface. Be certain the surface does not scratch the Bench Seat.
2. Attach one piece (B) Leg using two (C) Bolts, using the (D) Hex Wrench (see illustration below, locate stickers B and loosely attach Bolts).
3. Attach opposite side (B) Leg using two (C) Bolts.
4. Insert (A) Support Bar into both (B) Legs (see illustration below, locate stickers A and C).
5. Securely tighten all (C) Bolts using (D) Hex Wrench.



Securely tighten all (C) Bolts using (D) Hex Wrench.

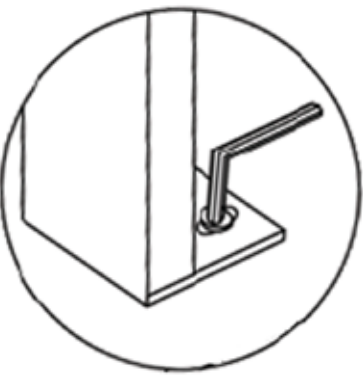

HAVE QUESTIONS? NEED ASSISTANCE? CONTACT CUSTOMER SERVICE 1-636-532-9888